
CORNING


1U/2U/3U Next Generation LANscape[®] Housings

p/n 003-876-QSG, Issue 1


· Visit http://www.corning.com/cablesystems for the in-depth installation manual. Search for part number 003-876.

CARTON CONTENTS 1.

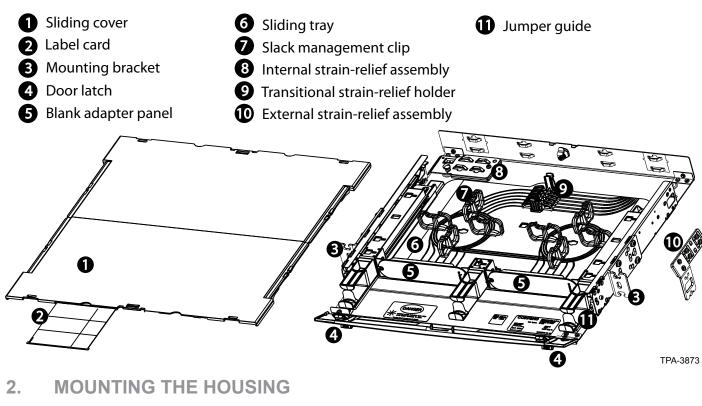


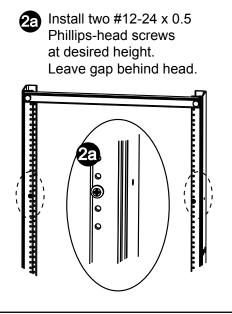

2b Slide mounting bracket notch over screw heads.

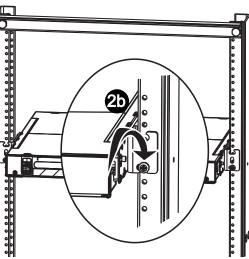


2C Install next two screws in center notch of mounting bracket; tighten all screws.

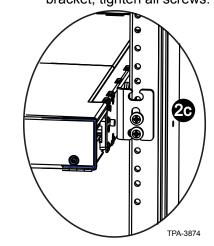

ACCESSING THE HOUSING 3.

3a Open front and rear doors. Pull covers with moderate force in opposite directions to remove.

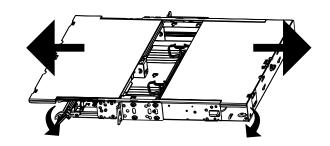

Slide tray toward rear of housing. Press latches on both sides to release tray and pull it completely out of housing.

Press here




ess here

INSTALLING CABLE FOR FIELD TERMINATION 4.


WARNING: Never look directly into the end of a fiber that may be carrying laser light. \land Laser light can be invisible and can damage your eyes. Viewing it directly does not cause pain. The iris of the eye will not close involuntarily as when viewing a bright light. Consequently, serious damage to the retina of the eye is possible. Should accidental eye exposure to laser light be suspected, arrange for an eye examination immediately.

4.1. Accessing the Cable for Field Termination


Strip Lengths for 1U, 2U, 3U Housings

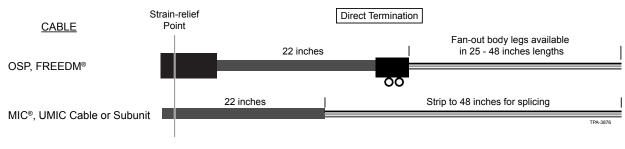

3 Lift plunger on internal strain-relief assembly. Push bracket to rear to disengage ridged flange on underside and remove it from the housing.

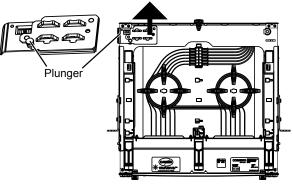


30 Set tray and strain-relief assembly on work surface for next operations.

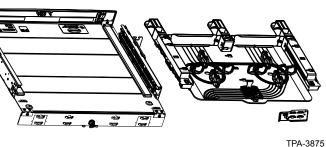

4.2. Sheath Retention


Small diameter cable: Cable tie to 2 bridges Large diameter cable: Cable tie to all 4 bridges Bundle of small diameter cable: Cable tie bundle together, then cable tie to all 4 bridges 4.3. Strain-relieving to the Transitional Strain-Relief Holder (4.3a) Replace blank panels with adapter Press buffer tube fan-out bodies into OR Secure loose tube panels applicable for the cable to the transitional connectors being used. holder with cable ties. transitional holder. In 2U or 3U housings, you may stack the transitional holder to accommodate more fan-out bodies or cables

 4.4. Cable Routing

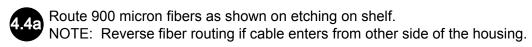


Secure fibers in slack management clips. 4.4b

Clean and mate adapters and connectors.

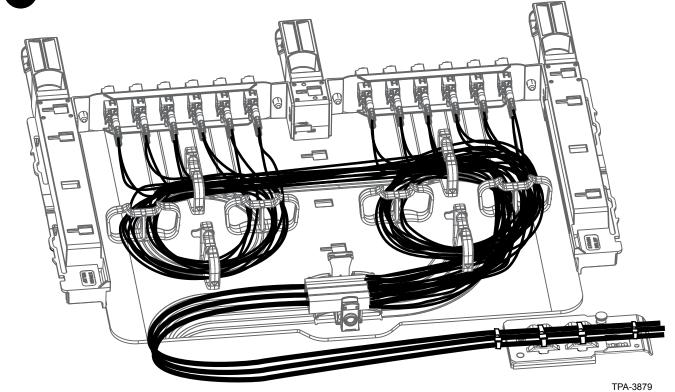

Reinstall internal strain-relief **4.4d** Slide shelf back into housing. 4.4e assembly onto the rear of the housing. Capture flange under ribbed lance. Secure with plunger. Slide shelf in

COMPLETING INSTALLATION 5.

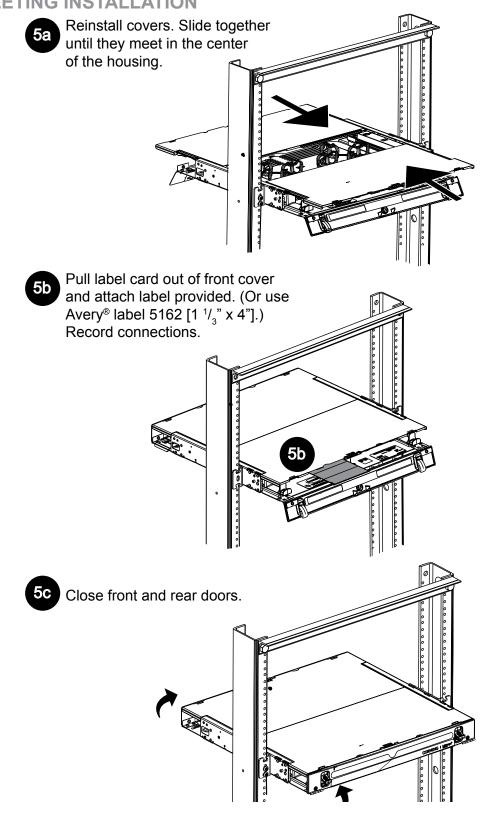

Corning Cable Systems LLC • PO Box 489 • Hickory, NC 28603-0489 USA 1-800-743-2671 • FAX +1-828-325-5060 • International +1-828-901-5000 • http://www.corning.com/cablesystems

Corning Cable Systems reserves the right to improve, enhance, and modify the features and specifications of Corning Cable Systems' products without prior notification. LANscape is a registered trademark of Corning Cable Systems Brands, Inc. All other trademarks are the properties of their respective owners. Corning Cable Systems is ISO 9001 certified.

© 2011 Corning Cable Systems. All rights reserved. Published in the USA.

